


AUTHORIZED DISTRIBUTOR



The PT1232, part of our compact line of cable extension transducers, delivers position feedback via RS232 serial communication to your data acquisition or controller system. The PT1232 sends a raw 16-bit position count from 0000 to FFFF (hex). Additionally this device can be set to continuously send data or send data only when polled.

As the internal position sensing element is a precision potentiometer, this transducer maintains current accurate position even during power loss and does not need to be reset to a "home" position.

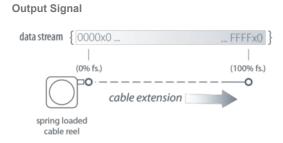

PT1232 Cable Actuated Sensor Industrial Grade • RS232

Absolute Linear Position to 50 inches (1270 mm) **Aluminum and Polycarbonate Enclosure Compact Design IP65 • NEMA 4 Protection**

General

Full Stroke Range Options	0-2 to 0-50 inches
Electrical Interface	R\$232
Format	Hex
Accuracy	\pm 0.25 to 0.10% full stroke (see ordering information)
Repeatability	± 0.02% full stroke
Resolution	± 0.003% full stroke
Measuring Cable	0.019-in. dia. nylon-coated stainless steel
Enclosure	glass-filled polycarbonate and anodized aluminum
Sensor	plastic-hybrid precision potentiometer
Potentiometer Cycle Life	see ordering information
Maximum Retraction Acceleration	see ordering information
Weight	1 lb. max.
Electrical	

Electrical

Input Voltage	922 VDC
Input Current	40 mA
Baud Rate	9600 (selectable to 38.4K)
Update Rate	32 msec

Environmental

Enclosure	NEMA 4, IP 65
Operating Temperature	0° to 185°F (-17° to 85°C)
Vibration	up to 10 g to 2000 Hz maximum

SENSOR SOLUTIONS /// PT1232

ALTHEN **SENSORS & CONTROLS** Germany/Austria/Switzerland Benelux info@althen.de


sales@althen.nl

12//2015

France

Sweden

I/O Format

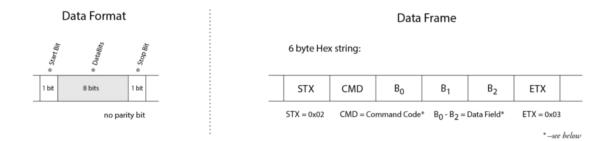

Important! All communications to/from the transducer are in HEX!

User Commands:

	User Command				Sensor Response			
Description	<cmd></cmd>	<b<sub>0></b<sub>	<b1></b1>	<b2></b2>	<cmd></cmd>	<b<sub>0></b<sub>	<b1></b1>	<b<sub>2></b<sub>
Get Sensor Info	0x05	0x00	0x00	0x00	0x05	version ⁽⁴⁾	date ⁽⁵⁾	date ⁽⁵⁾
Get Serial Number	0x15	0x00	0x00	0x00	0x15	serial number ⁽³⁾		
Start Continuous Data	0x25	0x00	0x00	0x00	0x25	0x00	0x00	0x00
Stop Continuous Data	0x35	0x00	0x00	0x00	0x35	0x00	0x00	0x00
Get Position Data	0x45	0x00	0x00	0x00	0x45	CMC ⁽¹⁾	CMC ⁽¹⁾	status ⁽²⁾

⁽¹⁾CMC - Current Measurement Count (Position)

The Current Measurement Count (CMC) is the output data that indicates the present position of the measuring cable.

The CMC is a 16-bit value that occupies the first two bytes (B₀ and B₁) of the data field. B₀ is the MSB (most significant byte) and B₁ is the LSB (least significant byte).

The CMC starts at 0000H with the measuring cable fully retracted and continues upward to the end of the stroke range stopping at FFFFH. This holds true for all ranges.

(2)Status

The status byte is used as a flag to indicate the validity of the position signal that the internal electronics receives from the potentiometer.

Flags are as follows:

0x00 = GREEN, 0x55 = YELLOW, 0xAA = RED

A "green" flag shows everything OK. A "yellow" or "red" flag indicates that the sensor has either been extended beyond its range or that there is a problem with the potentiometer.

RS232 Controller Board and DIP Switch Location

⁽³⁾Serial Number

Each sensor has it's own unique serial number. This information can be retrieved by sending the sensor the "Get Serial Number" command.

The serial number is a 3 byte value from which ranges from 0 to 9999999 (decimal).

⁽⁴⁾Version

This is a single byte value (0-255 decimal) which indicates the currently installed firmware version of the sensor.

⁽⁵⁾Date

 
This is a 2 byte value showing the date of currently installed firmware. This value ranges from 01011 -12319 (decimal). Format is MMDDY. While the month and day are expressed as two digit numbers the year is expressed in a single digit only.

 
Example: 08054 = August 5, 2004

Baud Rate

The baud rate can be set using switches 7 & 8 on the 8-pole DIP switch found on the rs232 controller board located inside the transducer.







to gain access to the controller board, remove four Allen-Head Screws and remove rear cover.





SENSOR SOLUTIONS /// PT1232



Germany/Austria/Switzerland Benelux info@althen.de

sales@althen.nl

12//2015


France

Sweden

info@althensensors.fr info@althensensors.se info@althensensors.com info@althensensors.com

USA/Canada

Outline Drawing

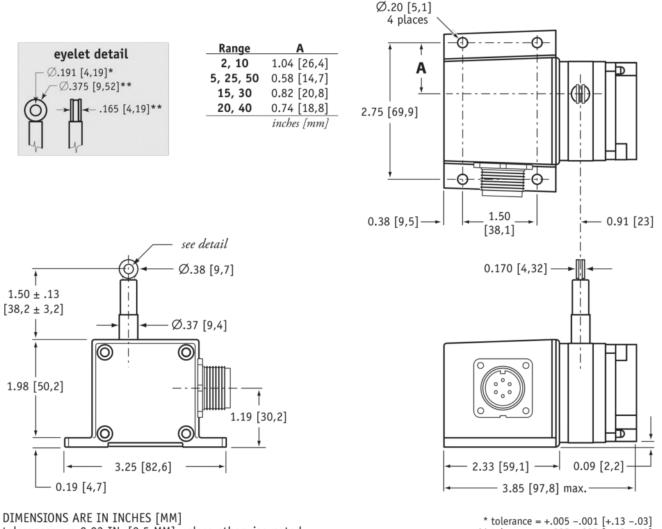

tolerances are 0.03 IN. [0.5 MM] unless otherwise noted.

** tolerance = +.005 -.005 [+.13 -.13]

SENSOR SOLUTIONS /// PT1232



Germany/Austria/Switzerland Benelux info@althen.de

 
12//2015

France

Sweden

Ordering Information

Model Number:



Sample Model Number:


PT1232 - 50 - UP - M6 - SG

R range: A measuring cable exit: electrical connection: ₿ O cable guide


50 inches up (top exit) 6-pin plastic connector spring loaded

Full Stroke Range:

lorder code:	2	5	10	15	20	25	30	40	50	
full stroke range, min:	2 in.	5 in.	10 in.	15 in.	20 in.	25 in.	30 in.	40 in.	50 in.	
accuracy (% of f.s.):	0.2	5%	0.15%				0.10%			
potentiometer cycle life:	2,500,00	0 cycles	500,000 cycles				250,000 cycles			
cable tension (20%):	12 oz.	5 oz.	12 oz.	9 oz.	6 oz.	5 oz.	9 oz.	6 oz.	5 oz.	
max. cable acceleration:	11 g	3 g	11 g	5 g	4 g	3 g	5 g	4 g	3 g	

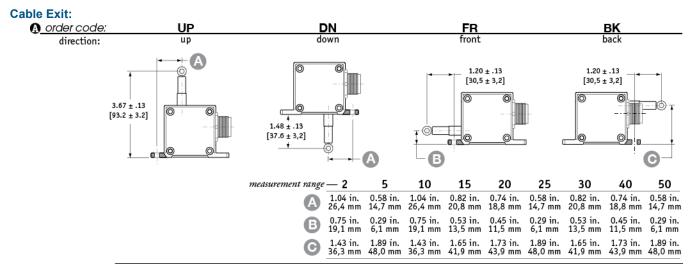

Electrical Connection:

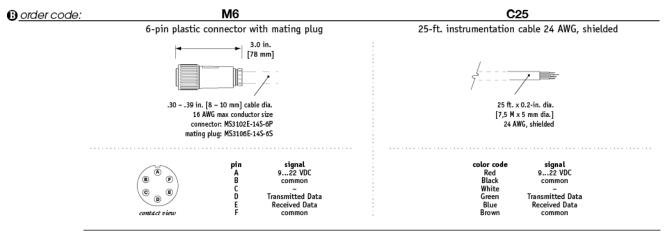

SENSOR SOLUTIONS /// PT1232

12//2015



Germany/Austria/Switzerland Benelux info@althen.de


France

Sweden

sales@althen.nl info@althensensors.fr info@althensensors.se info@althensensors.com info@althensensors.com

USA/Canada Other countries

Cable Guide:

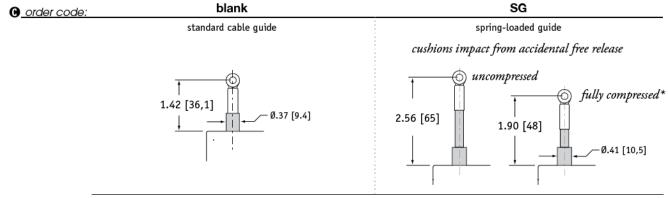

^{*}note: start of full stroke range begins at full compression point (except 2-inch and 5-inch ranges).

The information given herein, including drawings, illustrations and schematics which are intended for illustration purposes only, is believed to be reliable. However, TE Connectivity makes no warranties as to its accuracy or completeness and disclaims any liability in connection with its use. TE Connectivity's obligations shall only be as set forth in TE Connectivity's Standard Terms and Conditions of Sale for this product and in no case will TE Connectivity be liable for any incidental, indirect or consequential damages arising out of the sale, resale, use or misuse of the product. Users of TE Connectivity products should make their own evaluation to determine the suitability of each such product for the specific application.

PT1232 12/01/2015

SENSOR SOLUTIONS /// PT1232 12//2015

