



PT5CN

Description

- Absolute Linear Position to 250 inches (6350 mm)
- Hard Anodized Aluminum Enclosure
- High Cycle Applications
- IP67 NEMA 6 Protection




The PT5CN cable extension position transducer communicates linear position via the CANbus SAE J1939 interface providing a precision position feedback to your PLC. The PT5DN is offered in full stroke ranges up to 250 inches and a thermoplastic measuring cable for high cycle and rugged applications.

Because the PT5CN uses a potentiometer as it's sensing element, the position signal is "absolute" and does not have to be reset to a "home" position upon startup.

GENERAL

0-10 to 0-250 inches Full Stroke Ranges CANbus SAE J1939 Electrical Interface Protocol Proprietary B \pm 0.25% to \pm 0.10% full stroke Accuracy Repeatability ± 0.02% full stroke Resolution ± 0.003% full stroke Measuring Cable stainless steel or thermoplastic **Enclosure Material** hard anodized aluminum Sensor plastic-hybrid precision potentiometer Potentiometer Cycle Life see ordering information Maximum Retraction Acceleration see ordering information Weight 5 lbs. max.

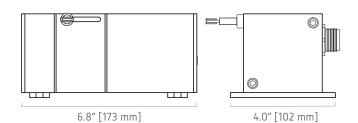

Output signal



ELECTRICAL

Input Voltage 7 - 18 VDC
Input Current 60 mA max.
Baud Rate 125K, 250K, or 500K via DIP switches
Update Rate 10 ms. (20 ms. available – contact factory)

ENVIRONMENTAL

Environmental Suitability NEMA 4/6, IP 65/67

Operating Temperature -40° to 185°F (-40° to 85°C)

Vibration up to 10 g to 2000 Hz maximum

I/O Format and Settings



repetition = 8 msec.

Identifier

Lillei	Messa	age Pri	iority	Fut	ure se				39 Re Propri							Da	ta Fie	ld Typ	oe*			Not l	Jsed			Node	ID**		
Example –	1	0	0	0	0	1	1	1	1	1	1	1	1	0	1	0	1	0	0	1	1	0	0	1	1	1	1	1	1
ldentifier Bit No. –	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Hex Value —			()			F				F				5				3				3				F		

^{*}Sensor field data can be factory set to customer specific value. **Customer defined, set via Dips 1-6. Bit values shown for example only, see Address Setting below.

Data Field

 B_0 = LSB current % of measurement range byte B_1 = MSB current % of measurement range byte

 B_2 = LSB current measurement count byte B_3 = MSB current measurement count byte

 $B_{4} = \text{error flag}$ $B_{5} = \text{error flag}$ $B_{6} = LSB \text{ velocity data byte}$ $B_{7} = MSB \text{ velocity data byte}$ $B_{7} = MSB \text{ velocity data byte}$ $B_{7} = B_{6} \quad B_{5} \quad B_{4} \quad B_{3} \quad B_{2}$



Current Measurement Count

The Current Measurement Count (CMC) is the output data that indicates the present position of the measuring cable. The CMC is a 16-bit value that occupies bytes B_2 and B_3 of the data field. B_2 is the LSB (least significant byte) and B_3 is the MSB (most significant byte).

The CMC starts at 0x0000 with the measuring cable fully retracted and continues upward to the end of the stroke range stopping at 0xFFFF. This holds true for all ranges.

Converting CMC to Linear Measurement

To convert the current measurment count to inches or millimeters, simply divide the count by 65,535 (total counts over the range) and then multiply that value by the full stroke range:

Sample Conversion:

If the full stroke range is 30 inches and the current position is 0x0FF2 (4082 Decimal) then,

$$\left(\frac{4082}{65,535} \right)$$
 X 30.00 inches = 1.87 inches

If the full stroke range is 625 mm and the current position is 0x0FF2 (4082 Decimal) then,

$$\left(\frac{4082}{65,535}\right)$$
 X 625 mm = 39 mm

B₇ B₆ B₅ B₄ B₃ B₂ B₁ B₀

Current % of Measurement Range

The Current % of Measurement Range is a 2-byte value that expresses the current linear position as a percentage of the entire full stroke range. Resolution is .1 % of the full stroke measurement range.

This value starts at 0x0000 at the beginning of the stroke and ends at 0x03E8.

Example:

Hex	Decimal	Percent
0000	0000	0.0%
0001	0001	0.1%
0002	0002	0.2%
N3E8	1000	100.0%



Error Flags

0x55 (yellow LED on controller board) indicates that the sensor has begun to travel beyond the calibrated range of the internal position potentiometer.

0xAA (red LED on controller board) indicates that the sensor has moved well beyond the calibrated range of the internal position potentiometer.

If either error flag occurs within the full stroke range of the sensor, the unit should be returned to the factory for repair and recalibration.

B₇ B₆ B₅ B₄ B₃ B₂ B₁ B₀

Current

Current % of


Measurement Range


 B_{Ω}

B₁

Velocity

Data in bytes B_7 – B_6 is the change in the CMC (current measurement count) over a 100 msec time period. This data can then be used to calculate velocity in a post processing operation.

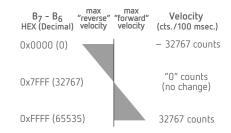

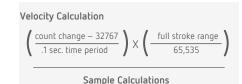

Cable Extension (positive direction):

 $B_7 - B_6 = 0x89C6$ (43462 Dec), full stroke = 60 in.

$$\left(\frac{35270-32767}{.1 \text{ sec}}\right) \times \left(\frac{60 \text{ in.}}{65,535}\right) = 22.92 \text{ in. / sec.}$$

Cable Retraction (negative direction):

 $B_7 - B_6 = 0x61A8$ (25000 Dec), full stroke = 60 in.

$$\left(\frac{25000-3276}{\text{sec}}\right).1 \times \left(\frac{60 \text{ in.}}{65,535}\right) = -71.11 \text{ in. / sec}$$



Setting the Address (Node ID) and Baud Rate

Address Setting (Node ID)

The Address Setting (Node ID) is set via 6 switches located on the 8-pole DIP switch found on the DeviceNET controller board located inside the transducer.

The DIP switch settings are binary starting with switch number 1 (= 2^0) and ending with switch number 6 (= 2^5).

Baud Rate


The transmission baud rate may be either factory preset at the time of order or set manually at the time of installation.

The baud rate can be set using switches 7 & 8 on the 8-pole DIP switch found on the DeviceNET controller board located inside the transducer.


DIP-7 DIP-8 baud rate

0.67 [17,0]

CANBus Controller Board

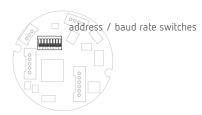


internal dip switches & controller board to gain access to the controller board, remove four Allen-Head Screws and remove end cover bracket.

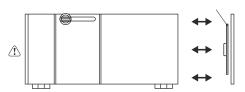



Caution! Do Not Remove Spring-Side End Cover removing spring-side end cover could cause spring to become unseated and permanently damaged.

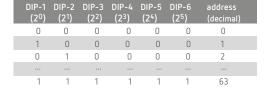

0	0	125k
1	0	250k
0	1	500k
1	1	125k
		† = "0"


Outline Drawing

0.69 [17,5] -

00 [101,6]


50 [88,9]



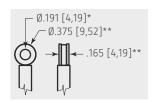

A DIMENSION (inches[mm])


RANGE	N34 measuring cable	S47 & V62 measuring cable
10	0.05 [1,2]	0.08 [2,0]
15	0.07 [1,8]	0.12 [3,0]
20	0.09 [2,4]	0.16 [3,9]
30	0.14 [3,5]	0.23 [5,9]
40	0.19 [4,7]	0.31 [7,9]
50	0.23 [5,9]	0.39 [9,9]
60	0.28 [7,0]	0.47 [11,8]
80	0.37 [9,4]	0.62 [15,8]
100	0.46 [11,7]	0.78 [19,7]
125	0.58 [14,7]	0.97 [24,7]
150	0.69 [17,6]	1.16 [29,6]
200	0.92 [23,5]	n/a
250	1.16 [29,3]	n/a

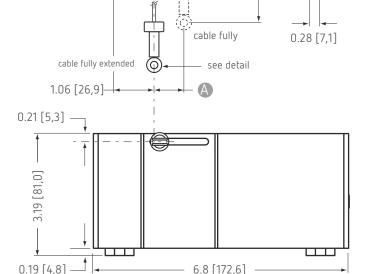

- 5.32 [135,0]

DIMENSIONS ARE IN INCHES [MM]

tolerances are 0.03 IN. [0.5 MM] unless otherwise noted.

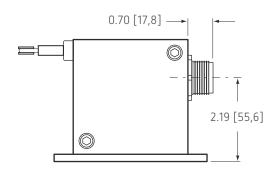

- * tolerance = +.005 -.001[+.13 -.03]
- ** tolerance = +.005 -.005[+.13 -.13]



Setting the Address (Node ID) and Baud Rate

Model Number:

PT5CN -

Sample Model Number:

PT5CN - 50 - S47 - FR - J - 500 - 32 - SC5

A cable:

B measuring cable exit: interface:
baud rate:
ID:
electrical connection:

CANbus SAE J1939 500 k bits/sec. node 32 decimal

front

50 inches measuring


.047 stainless steel

5-meter cordset with straight plug


Full Stroke Range:

	R order code:	10	15	20	25	30	40	50	60	80	100	125	150	200	250
	full stroke range, min:	10 in.	15 in.	20 in.	25 in.	30 in.	40 in.	50 in.	60 in.	80 in.	100 in.	125 in.	150 in.	200 in.	250 in.
	accuracy (± % of f.s.):	.75%	.6%	.5%	.5%	.5%	.3%	.3%	.25%	.25%	.25%	.25%	.18%	.18%	.18%
	repeatability (± % of f.s.):	.1%	.1%	.05%	.05%	.05%	.05%	.05%	.02%	.02%	.02%	.02%	.02%	.02%	.02%
	potentiometer cycle life:		2,50	0,000 cy	cles				500,00	0 cycles			250	,000 cy	cles
	cable tension (20%):					41 o	unces							21 0	ounces
max.	cable velocity/acceleration:					300 in./	sec • 5 g	9						120 in./	sec · 2 g

Measuring Cable:

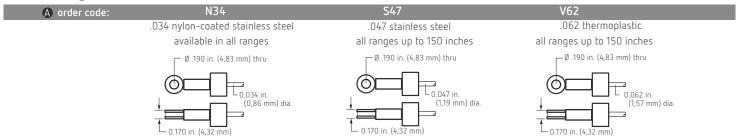

Cable Exit:

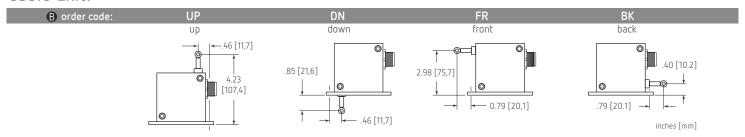

Baud Rate:

Order code:	125	250	500		
	125 kbaud	250 kbaud	500 kbaud		

Node ID:

E order code: select address (0 - 63 Decimal)

Page 4/5



Ordering information (cont.)

Electrical Connection:

